

GHOST BUST PRO[®] SETUP INSTRUCTIONS

The positioning of the projector and bust is important for getting a good effect with the Ghost Bust. To begin, place the Ghost Bust in the spot you've chosen for it. If you'll be mounting the projector to a standard 8' ceiling, the bust should be placed on a surface that is exactly 50.5" above the floor.




If mounting to a ceiling that's higher or lower, add or subtract the same additional inches to the height of the surface the bust will rest on.

TIP: Night Frights now offers an exciting pedestal option for quick setups... the new Skull Column! Not only does it look cool, it raises the Ghost Bust to the perfect height (if installing in a room with an 8' ceiling). Visit our online store at www.nightfrights.com.

Once the bust is in its general spot, it's time to find the proper location for the projector. The projector needs to be mounted to the ceiling at a distance of exactly 6' from the bust, measured diagonally from the center of the name plate on the bust to the projector lens.

TIP: Attach the projector mount to the projector and point one corner of the square ceiling plate toward the bust. Tie a string through the hole in that front corner of the plate. Measure and mark the point on the string 6'5" from the hole. Have someone hold the string with the mark held against the bust's nameplate while you hold the projector and its mount up against the ceiling, moving it into the position until the string is fully extended. That's the spot to mount the projector! Mark the location of the holes in the ceiling plate and attach according to the instructions that came with the mount.

Fine-tuning the bust position is next... Use the same string you used previously and use a piece of duct tape to secure it to the projector just above the lens. Position the bust so that the string reaches each corner of the bust's base equally. If the string barely reaches one corner of the bust, but goes an inch or two beyond the corner on the other side, the bust probably needs to be shifted toward the shorter side so that it's more centered with the projector lens.

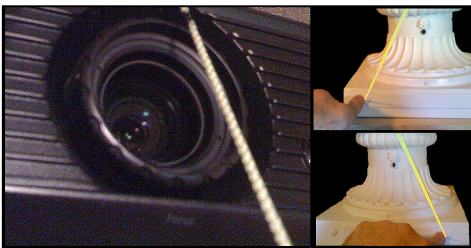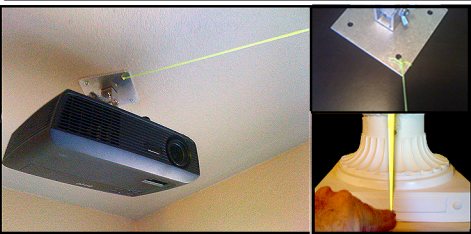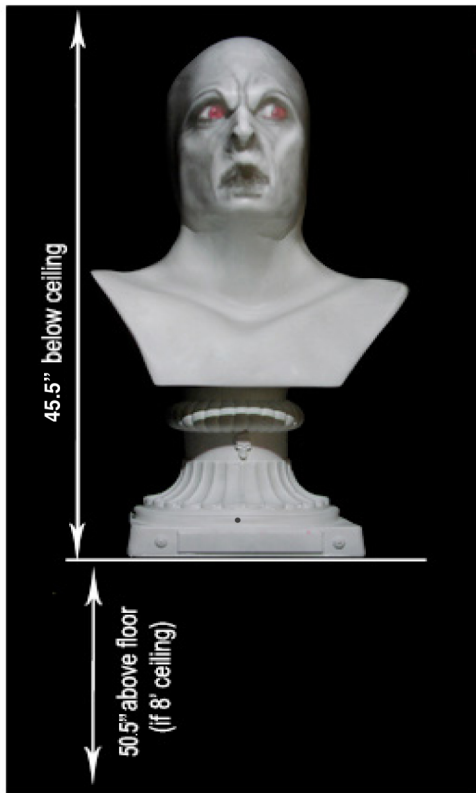


GHOST BUST® PRO SETUP INSTRUCTIONS (CONTINUED)

Let's make the connections and then we'll tweak some projector settings...




Attach one end of an RCA video cable to the "Video In" jack on the projector; the other to your DVD player. Alternatively, you can use the projector's VGA Input using a VGA to RCA Component cable connected to the red, blue and green component outputs on your DVD player if available. VGA will display more saturated (richer) colors, though a standard RCA cable is thinner and a little easier to hide.

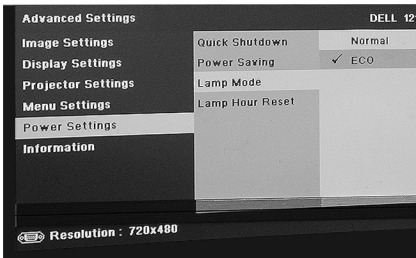


Turn on the projector via the remote control or by pushing the blue Power button on the projector. The image will slowly brighten until you can see the manufacturer logo

For starters, let's turn the Economy Mode on to increase our lamp life. Press the MENU button on the projector's remote and scroll down to **ADVANCED SETTINGS**, then press the ENTER button. (It may be easier to see the options if you hold up a piece of paper in front of the lens). Next, choose **POWER SETTINGS**, then **LAMP MODE** and set the projector's Lamp Mode to "ECO" (Economy Mode). That will allow you to get another estimated 1000 hours out of your lamp! Press the MENU button again to exit.

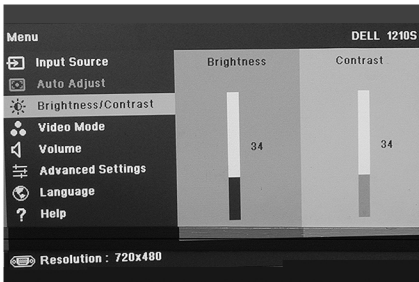

Next, let's dim the image a bit, (optional). Press the MENU button again and this time choose **BRIGHTNESS/CONTRAST**. Change both the Brightness and Contrast settings to 34 or set to suit your own tastes. NOTE: If the room is not very dark, you can choose a brighter preset mode by pressing MENU, then VIDEO MODE, then choosing one of the available brightness presets.

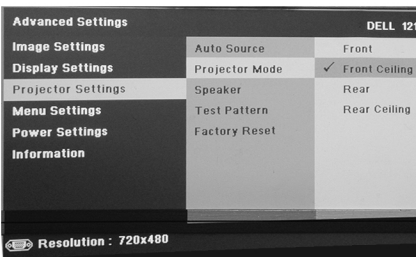

Finally, since we'll be mounting the projector to the ceiling, we'll need to flip the image so that it's viewed right side up once it's mounted. Press MENU, then **ADVANCED SETTINGS**, **PROJECTOR SETTINGS**, **PROJECTOR MODE**, and choosing 'FRONT CEILING'. Press MENU again to exit. We're done with the projector for now.



GHOST BUST PRO® SETUP INSTRUCTIONS (CONTINUED)

Load the DVD into your DVD player. The first image that comes up includes a setup menu. Aim the projected image at the bust and focus the projector.

Always keeping the necessary 6' between the projector and bust, adjust the projector and the bust to get the alignment marks in the right positions. Start by adjusting the projector so that the the green nameplate zone is level with the nameplate on the bust, and see that the left and right dots align with the dots on bust as much as possible; and the crosshairs should bisect the small decorative skull and continue down along the ornamental ridge there.

Press play to start the DVD routine. When properly aligned, you should not see much "halo" on the wall behind the bust, though a little may be unavoidable.

TIP: A black surface behind the bust will help minimize any visible halo (light missing the bust and hitting the wall).

Check the position of the nostrils; they're a good guide to see if you're close to having good alignment.

Most importantly, don't freak out if you can't get all the alignment marks to line up properly. They are there as a guide, but the important thing is that the face looks good to you. Use the guides to get you in the ballpark, then ignore them and concentrate on getting the face aligned to your satisfaction.

Once you're set, dim the lights, turn up your sound system, hit play, and enjoy the show!

Your Dell 1210S Projector comes with a two year warranty (90 days on the bulb) directly from the manufacturer. For projector technical support, visit www.dell.com/support .

Storage: Be sure not to subject your bust to high temperatures! Avoid storing it in hot attics or other hot spots where excessive heat can deform its shape!

RECOMMENDED ACCESSORIES FOR YOUR GHOST BUST!



AVAILABLE AT WWW.NIGHTFRIGHTS.COM



FACEBOOK.COM/NIGHTFRIGHTSHALLOWEEN