


GHOST BUST® CLASSIC SETUP INSTRUCTIONS

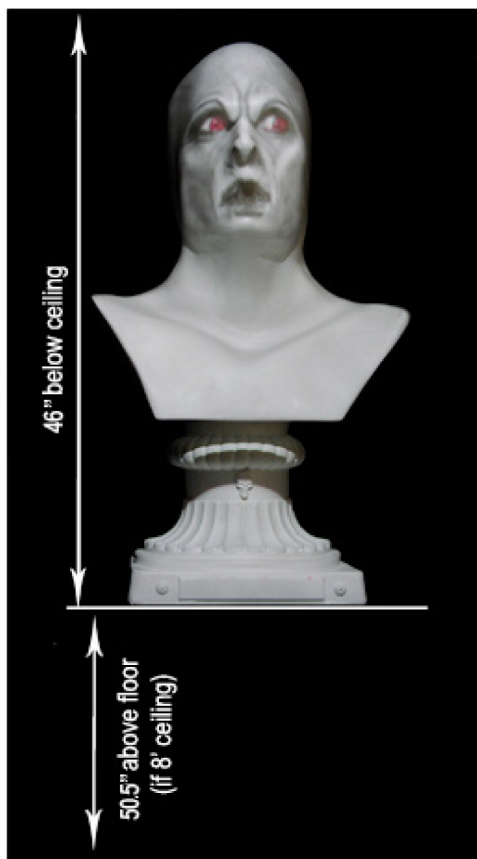

The positioning of the projector and bust is crucial for getting a good effect with the Ghost Bust.

For your convenience, Night Frights now includes a simple projector mount with every purchase.

To begin, place the Ghost Bust in the spot you've chosen for it. If you'll be mounting the projector to a standard 8' ceiling, the bust should be placed on a surface that is exactly 50.5" above the floor.

If mounting to a ceiling that's higher or lower, add/subtract the same additional inches to the height of the surface the bust will rest on. It's essential that the distance between the surface you're mounting the projector to (the ceiling) and the bottom of the bust's base be 46".

TIP: Night Frights now offers the Ghost Bust Adjustable Riser, a sturdy yet compact stand that allows you to adjust the bust quickly and easily to any height up to 7 feet! See the Night Frights Store on our website for more details.

Once the bust is in place, it's time to find the proper location for the projector.



The projector needs to be mounted to the ceiling at a distance of exactly 6' from the bust, measured diagonally from the base of the bust to the front of the projector.

TIP: Using a rigid stick, 1x2, etc. cut to 6' instead of a tape measure makes this step in the installation much quicker. An extension rod from a duster from your grocery store is a great too. Extend to 6', mark it, and measuring is a snap.

The projector's angle should be at approx. 34 degrees. If you measure the projector's top corners' distance from the ceiling, it should be 3" lower than the ceiling in front and 3/4" lower in back.



Using either the included wood screw or the included toggle bolt, attach the L-bracket to the ceiling. (Note: Some of the toggle bolts shipped in May were a bit oversized. You may need to use a different toggle bolt. "No good deed..." ;)



Make it nice and snug, but still able to be nudged to turn left or right a tiny bit if needed.

Now attach the larger C-shaped bracket to the L-bracket by threading the provided 1/4" bolt and wing nut through the lowest hole in the L-bracket.

Slide the projector into the bracket, making sure it's nice and snug, keeping the bracket as close to the front edge of the projector as possible. Plug the cable into the back of the projector and, leaving some slack in the cables, secure the cables to the upper hole in the L-bracket using the provided zip tie or twist-tie. This will prevent the the weight of the cables from pulling the projected image out of alignment.

Run the power cable and video cable down the wall and connect to a power outlet and DVD player. Run the DVD player's audio output to your sound system, and you're ready to turn on the projector.



The projector's power button is a touch panel on the top of the unit, so you won't be able to feel the button itself. Instead, simply reach up and softly pretend to "pinch" the back end of the projector. This will put your finger in the right position to press the "undetectable" power button. Wait for four seconds until you see or hear the projector come on, (this projector is quiet, so listen closely!)

Aim the projected image at the bust and focus the blue logo letters that first appear over the face so that they're nice and sharply focused in the face area, (where the detail is most important).



Load the DVD into your DVD player. The first image that comes up includes a menu allowing you to choose the length of time in between repeats of the routine(s). (If you're using the Night Frights Control Freak to control the playback of your DVD player, choose the first option on the menu so that playback will respond to your guests activating a switch mat or PIR sensor).

After choosing a playback option, the next screen you'll see will include a menu of all the available tracks on the DVD as well as some alignment marks to help you align the projector properly with the bust.



Always keeping the necessary 6' between the projector and bust, adjust the projector and the bust to get the alignment marks in the right positions: left and right dots aligned with dots on bust; nameplate should be temporarily green; and the crosshairs should bi-sect the small decorative skull and continue downward along the ornamental ridge there.



When properly aligned, you should not see much "halo" on the wall behind the bust, though a little is unavoidable.

Above all else, pay close attention to the nostrils... they should be centered on the bust's lower nose area. All other indicators are secondary to getting the nostrils in the right position.



Align the bust and projector in tiny increments, always maintaining exactly 6' between the two. (This is where Tip#2 comes in handy), until the nostrils are in place and the eyes and mouth appear to be in the correct positions. Small adjustments can make big changes in the appearance of the projected image. Make slight adjustments until satisfied.

Apply the Ghost Bust nameplate sticker if desired.

If you've purchased a [Control Freak](#) DVD Controller or [Ghost Bust Blaster](#), click these links to see detailed instructions on setup of these fun add-ons.

Otherwise, dim the lights, turn up your sound system, hit play, and enjoy the show!