


THE GHOST BUST® SETUP INSTRUCTIONS

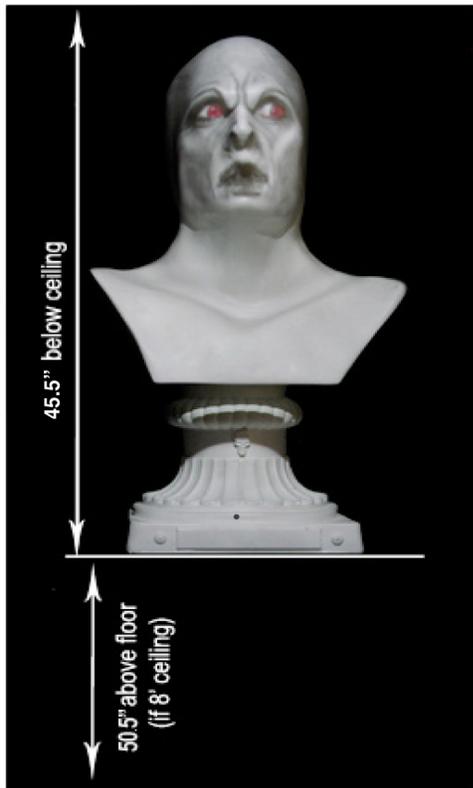

POSITIONING


The positioning of the projector and bust is important for getting a good effect with the Ghost Bust. To begin, place the Ghost Bust in the spot you've chosen for it. If you'll be mounting the projector to a standard 8' ceiling, the bust should be placed on a surface that is 50.5" above the floor.

If mounting to a ceiling that's higher or lower, add or subtract the same additional inches to the height of the surface the bust will rest on.

TIP: Night Frights offers an adjustable riser for quick setups. Visit our online store at www.nightfrights.com.

Once the bust is in its general spot, it's time to find the proper location for the projector. The projector needs to be mounted to the ceiling at a distance of 6' from the bust, measured diagonally from the center of the nameplate on the bust to the projector lens.


TIP: Attach the projector mount to the projector and point one corner of the square ceiling plate toward the bust. Tie a string through the hole in that front corner of the plate. Measure and mark the point on the string 6'5" from the hole. Have someone hold the string with the mark held against the bust's nameplate while you hold the projector and its mount up against the ceiling, moving it into the position until the string is fully extended. That's the spot to mount the projector! Mark the location of the holes in the ceiling plate and attach according to the instructions that came with the mount.

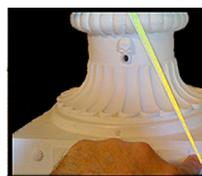

Fine-tuning the position is next... Look to see that the bust is right in front of the projector lens, and not off to one side. Use the same string you used previously and touch it to the top left corner of the Ghost Bust's base. Now touch the same spot on the string to the top right corner of the base. Rotate the bust until both corners are the same distance away from the projector.

Next, let's connect the video player.

GHOST BUST® SETUP INSTRUCTIONS (CONTINUED)

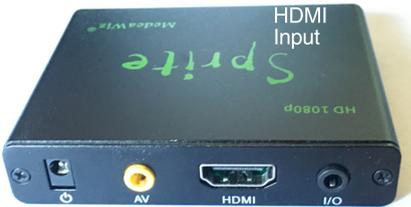

VIDEO PLAYER CONNECTIONS

The Sprite is a HD digital video player that can launch the video when someone activates a trigger. Use the provided HDMI cable to connect the Sprite to the projector's HDMI port.

Next, plug the AV cable provided into the yellow AV jack on the back of the Sprite and attach the cable's red and white RCA plugs to your sound system.

Insert the included SD card into the Sprite's SD slot.

Now connect the Sprite's power cable. The blue LED should illuminate.

Insert the SD Card into the slot in the Sprite video player.

TRIGGERING THE VIDEO

When the Sprite starts up, it will play a looping video of the character sleeping. We want the routine to start when a switch mat or push-button is pressed, (sold separately). If you've purchased one of our switch mats, all you have to do is plug the mat's cable into the Sprite's I/O jack. If using your own, connect your trigger's two wires to the screw terminals marked "R" and " ", (for "ground") on the included plug and insert it into the Sprite's I/O jack. (To connect a PIR sensor, or for more detailed info on the Sprite digital video player, visit www.nightfrights.com/SpriteUserManual.pdf).


GHOST BUST[®] SETUP INSTRUCTIONS (CONTINUED)



PROJECTOR SETTINGS

Attach one end of the included HDMI cable to the HDMI input on the projector; the other to the Sprite's HDMI output jack.

Turn on the projector via the remote control or by pushing the Power button on top of the projector. The image will slowly brighten over the next 30 seconds until you can see an upside-down character being projected. We'll need to flip the image. It may be easier to see the projector options if you prop a piece of cardboard in front of the bust to project onto.

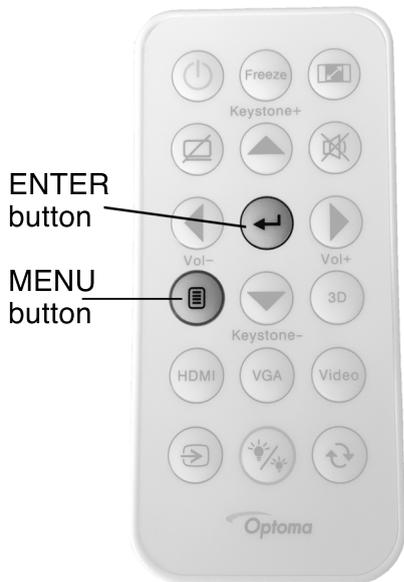

Press the MENU icon on the projector's remote, then use the DOWN ARROW KEY twice to select the gear icon. Press the ENTER button. Press the ENTER button again to select the Projection options. Press the UP ARROW KEY once and press ENTER. You should now see everything right side up and read-able, though the character will appear to be too small. Let's fix that.



Press the ASPECT RATIO button, (the top right button on the remote), and use the left and right arrow keys to scroll through the options until you see the "Native" option. Press the ENTER button.



Next, let's turn the Economy Mode on to double the lamp's life. Press the BRIGHTNESS MODE button and use the arrow keys to set the Brightness Mode to "ECO" (Economy Mode).

NOTE: To adjust to your room's brightness levels, you can choose a brighter or dimmer preset mode by pressing the MENU button and then ENTER three times until you get to the screen where you can audition the different video modes. Pick whichever looks best to you in your environment.

GHOST BUST® SETUP INSTRUCTIONS (CONTINUED)

Aim the projected image at the bust and focus the projector. (If you look closely, you'll see a faint grid on the bust that tells you when it's in sharp focus).

Use a level to check to see that the bust's base is level. Next, rest the level on top of the back end of the projector and get the projector as level as possible too. Always keeping the necessary 6' between the projector and bust, adjust the projector and the bust to get the face looking good and the projected light contained within the bust's borders.

Pay special attention to the nostrils. Get them in the right spot on the bust and you should be in good shape.

When properly aligned, you should not see much "halo" on the wall behind the bust. If you do see a little bit of halo, a black background behind the bust helps minimize it.

Once you're set, dim the lights, turn up your sound system, hit play, and enjoy the show!



Storage: Be sure not to subject your bust to high temperatures! Avoid storing it in hot attics or other hot spots where excessive heat can deform its shape!