

# THE HAUNTED MIRROR™


## Setup Instructions

### MOUNTING THE TELEVISION

Begin by locating your Haunted Mirror in a location where guests will pass it in close proximity. We advise against installing the mirror outdoors or in areas prone to wide temperature variations. The silvered surface is delicate, so protect it during use and storage!

Secure the wall mounting plate securely on the wall about 53" or so above the floor. Screw into a wall stud or use anchors to attach the mount securely. You can opt to use just two screws instead of four if you prefer.

Attach the mount's two rails to the back of the TV using the screws included with the TV and the rectangular washers that came with the mount. Make sure to mount them vertically so that the TV is mounted in portrait mode (making it taller than it is wider). Orient the television so the TV's bottom is on the right as you're facing its screen.

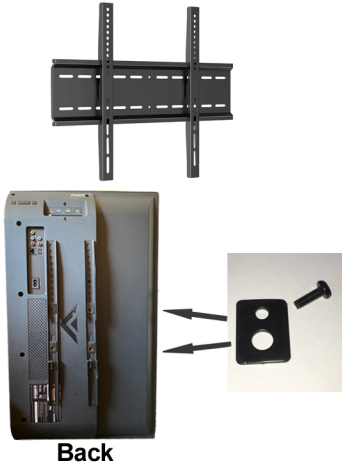

Back

### CONNECTIONS

Before hanging the TV on the wall mount, use the provided HDMI cable to connect the Sprite video player to one of the TV's HDMI ports. Connect the TV's power cable. (On this most recent model, Vizio moved the power jack to a new what-were-they-thinking location, so the cable gets a tight squeeze when mounted.)

Next, plug the black end of the AV cable provided into the yellow AV jack on the back of the Sprite and attach the cable's red and white RCA plugs to your sound system, (the yellow plug isn't used). DO NOT attempt to use the TV's built-in speakers, as they won't have the power needed to give your guests a good scare, may distort, and will clip off the first half second of sound, making it look out of sync with the video. Once your connections are made, hook the TV onto its wall mount. Then turn on the TV and select the HDMI input that you attached the HDMI cable to. Skip through any steps asking you to connect the TV to the internet.

If the lighting in your mirror's location is such that the cables coming from the TV are noticeable, drape some fabric from the bottom of the mirror to hide them.

### PEEL OFF THE PROTECTIVE FILM IMMEDIATELY UPON DELIVERY

Each mirror is shipped with a protective film covering the front and back of the two-way mirror acrylic to protect it during shipping. Be sure to peel this thin plastic film off of the mirror on both sides to reveal the clear surface. Don't leave the plastic in place or it may adhere and pull the silvering off if left on for months. The mirror surface is quite delicate, so take care to avoid scratching it. Should you at some point need to clean the mirror, don't use Windex, as it may damage the surface. Instead, use dishwashing liquid and water, with more water than soap. Dry gently with a soft cloth.

### MOUNTING THE MIRROR

On the back of the mirror near the top of the oval panel, you'll see two pilot holes. Attach the square metal brackets using the accompanying screws so that the bracket resembles an upside-down "U". Temporarily bend one side of the bracket up for easier access to the screw. Use just one screw in the top left hole of the bracket, this will allow the bracket to swivel and self-level. Once attached, bend the bracket back into its original shape. Now simply hook the brackets over the front of the television so that the mirror completely hides the television.

### ADJUSTING THE TV IMAGE TO AVOID THE SUBTLE GLOWING RECTANGLE

In a completely dark setting, you may be able to see the TV screen glowing faintly through the mirror between scares unless you set the proper TV settings. To do so:


- Press the TV remote's setup button (gear icon) and choose the "Picture" option.
- Make sure the Picture Mode is set to "Standard".
- Set the Backlight setting all the way to zero.
- Press the Exit button to finish.

For best results, have just enough ambient light available so that your guests can see themselves reflected in the mirror, but not enough to overpower the video image.



Remove film on both sides of mirror

Use Top Left Screw Holes On Brackets Only

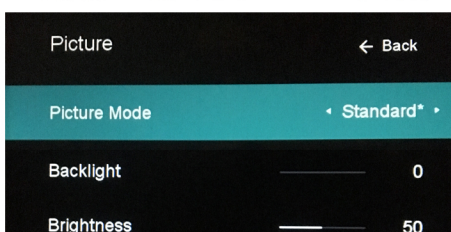

# THE HAUNTED MIRROR™

## Setup Instructions (Continued)



Proper setting for a PIR sensor shown  
Step mats use "Trigger Low No Interrupt"

### TRIGGERING THE VIDEO

Insert the included thumb drive into the Sprite's USB slot. When the Sprite starts up, it will begin playing a looping video of blackness, leaving the mirror reflective. The startle video will play immediately after a step mat/PIR/hand-held switch is triggered, (sold separately). If your trigger has a 1/8" plug, plug it into the Sprite's I/O jack. Otherwise, connect its two wires to the screw terminals marked "R" and "⊥", (for "ground") on the green and black plug that's included in the Sprite box. For PIR sensors, you'll need to set the Sprite's Control Mode: Using the Sprite's remote, press the Setup button, scroll down to "Control Mode", select "Trigger High No Interrupt", then press the yellow Return button twice to exit. Step mats and hand-held triggers should remain set to "Trigger Low No Interrupt".

### TROUBLESHOOTING

#### ISSUE: THE IMAGE ON THE TV LOOKS TOO SKINNY

Solution: Press the button labeled "16:9/4:3" on the Sprite's remote and cycle through the options until you see the numbers 16:9 displayed on the left.

#### ISSUE: THE AUDIO CUTS IN PART WAY THROUGH MARY'S SCREAM.

Solution: IMPORTANT! DO NOT USE THE TELEVISION'S SPEAKERS FOR AUDIO! As stated before, always use a powered external speaker or PA system.

#### ISSUE: THERE'S NO AUDIO REACHING MY SOUND SYSTEM

Solution: The Sprite's Audio Output Mode may have gotten switched to its default setting of "HDMI" instead of "A/V". Press the Setup button on the Sprite's remote (next to the red Power button) and use the orange arrow keys to scroll down to "Audio Output Mode", then press the green "Enter" button. Scroll down to the A/V option and press Enter again. Press the yellow Return button twice to exit.

Contact us for more information at [info@nightfrights.com](mailto:info@nightfrights.com).

## RECOMMENDED ACCESSORIES FOR YOUR HAUNTED MIRROR



**PIR Sensor**  
(2" x 2")  
\$49



**Hand-Trigger Switch**  
(for manual operation)  
\$49



**Pro Quality Switch Mat**  
(18 x 24")  
\$59



**80 Watt Wall-Mount Speaker**  
\$199

**AVAILABLE AT [WWW.NIGHTFRIGHTS.COM](http://WWW.NIGHTFRIGHTS.COM)**